

## MANUEL D'INSTRUCTION / INSTRUCTIONS MANUAL

ÉTIQUETTE TIMESTRIP® POUR  
ÉPURATEUR D'AIR

TIMESTRIP® LABEL FOR AIR PURIFIER



FR

EN

ANEST IWATA France S.A.

25 rue de Madrid 38070 Saint Quentin Fallavier



## INDICATEUR DE TEMPS IRREVERSIBLE

### 1. Activation

Retirez la languette de protection et collez immédiatement l'indicateur sur l'épurateur d'air.



FIG.1



FIG.2



FIG.3

### 2. Surveillance

**Pressez fermement** entre le pouce et l'index jusqu'à ce qu'il soit complètement enfoncé (le bouton se situe à l'arrière du Timestrip®). **FIG. 1**

Une ligne rouge apparaît dans la fenêtre : **l'indicateur est activé** et commence le décompte temporel. **FIG. 2**

Le colorant rouge progresse dans les fenêtres blanches pour indiquer le temps écoulé. **La progression est irréversible. FIG. 3**

### 3. Remplacement

Les cartouches doivent être remplacées à la fin des 12 mois indiqués par le Timestrip®.

**Pour remplacer l'indicateur expiré :**

- Retirez l'ancien Timestrip®
- Collez le nouvel indicateur sur le produit à l'emplacement préconisé **FIG. 4**.

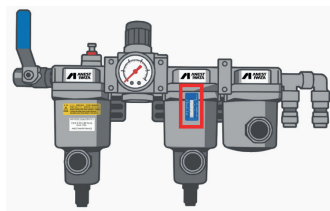


FIG.4

- **Activez** un nouvel indicateur (voir point 2).

**Référence étiquette de remplacement : 89250803 - ETIQUETTE TIMESTRIP 12 MOIS LOT DE 3**

## IRREVERSIBLE TIME INDICATOR

### 1. Activation

Remove the protective tab and immediately stick the indicator on the air cleaner.



FIG.1



FIG.2



FIG.3

### 2. Monitoring

**Press** firmly between your thumb and index finger until it is fully pressed (the button is on the back of the Timestrip®). **FIG. 1**

A red line appears in the window: **the indicator is activated** and starts the time countdown.

#### FIG. 2

The red dye progresses through the white windows to indicate the elapsed time.

**The progression is irreversible. FIG. 3**

### 3. Replacement

Cartridges must be replaced at the end of the 12 months indicated by the Timestrip®.

**To replace the expired flag:**

- **Remove** the old Timestrip®
- Stick the new indicator to the product **in the recommended location FIG. 4.**

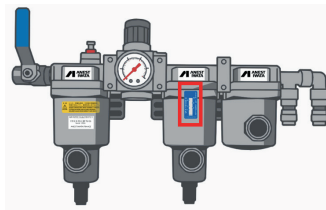


FIG.4

- **Activate** a new indicator (see point 2).

**Replacement label reference: 89250803 - TIMESTRIP 12 MONTH LABEL PACK OF 3**



ANEST IWATA France  
25, rue de Madrid 38070 St-Quentin-Fallavier FRANCE  
[www.anest-iwata-coating.com](http://www.anest-iwata-coating.com)  
[info@anest-iwata-fr.com](mailto:info@anest-iwata-fr.com)

